


Cimarron Premiere 7'x7' Zone Frame with Wheels

IMPORTANT: Please read directions thoroughly before assembling your screen.

- 1. Take all parts out of the box and make sure you have all the pieces.
- 2. Lay out the frame and proceed to connect all of the pieces, as shown in the diagram.
- 3. After frame is assembled, drill a screw through both pipes at every joint using the tool provided. The screws will drill themselves in with a little pressure, no guide hole is necessary.
- 4. Slide net over frame like a pillowcase.

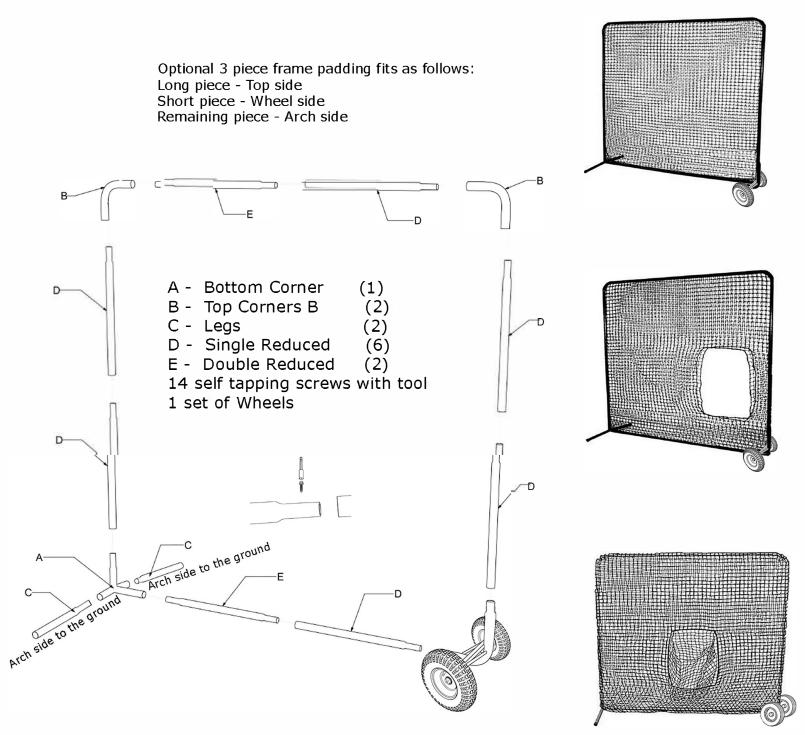

^{*}Bottom ground pieces have a slight arch. Arch should be positioned to set on the ground to accommodate uneven surfaces. Flip or turn it until you have it positioned correctly.